



## BAIT STATION

The Bait Station is fully assembled. Use this guide to properly attach an accessory to the product. Before you begin, review the entire guide and familiarize yourself with the step-by-step process.

Carefully un-box the product. Avoid using sharp blades or tools when removing plastic wrapping. The use of these could scratch the finish and damage the product. Lay a blanket or soft cloth on your work area to prevent damage during assembly.

## TOOLS

- » 4mm or 5/32 Allen Key

## HARDWARE BAG

- » 1/4"-20 x 3/4" 316 S/S Button Head Socket Cap Screw (2)
- » 1/4" x 5/8" (.032) Nylon Washer (4)
- » 1/4" x 5/8" S/S Washer (2)
- » Anticorrosive Lubricant

*Use one hardware bag per accessory.*

## SAFETY FIRST



Always wear task appropriate protective gear such as OSHA-approved glasses, gloves, work boots, etc. Make sure you have all supplemental materials, including hardware and parts prior to beginning. Always follow instructions. Remember: Improper use of tools or hardware may result in damage to the product or personal injury.

## QUESTIONS? CONTACT US.

954-732-6141  
AJ@SEAWARDSYSTEMS.COM  
SEAWARDSYSTEMS.COM

**HOW TO: Attach an Accessory**


- » Open the Bait Station Hardware Bag.
- » Thread the S/S washer then the nylon washer on the screw. Then from the inside of the product, insert the screw.
- » On the other side of the product, thread the second nylon washer.
- » Add a drop of anticorrosive lubricant to the top of the screw and hand-tighten to the accessory.
- » Repeat the above steps for the second hole.
- » Using the 4mm or 5/32 allen key, tighten each screw, turning 5 times.
- » For even tightening, alternate between screws and repeat until secure.

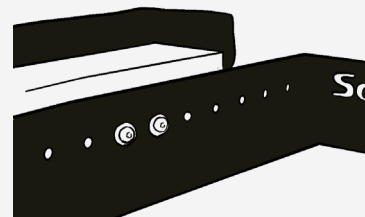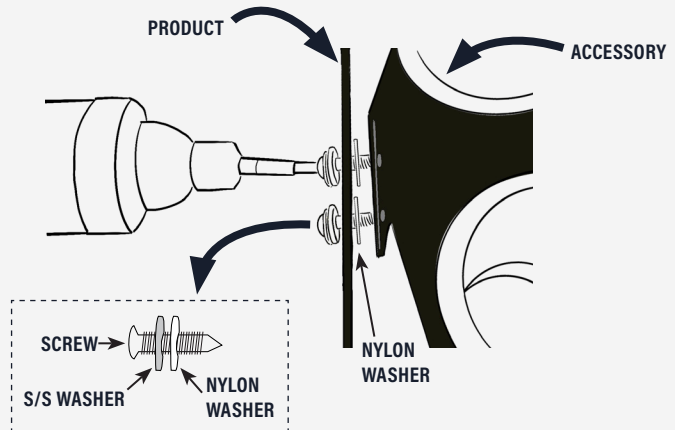

**HARDWARE DETAIL**

To help prevent damage to powder coating such as chipping, scratching, oxidizing, etc., all hardware **MUST** be installed following the order in our assembly guide.

**A nylon washer must always be used as a barrier between the powder coat and metal hardware.**

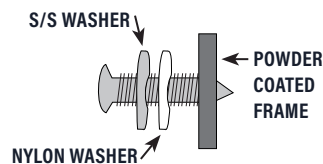

**LUBRICANT DETAIL**

Anticorrosive lubricant prevents screws from seizing and ensures smooth installation and removal of the hardware. Failure to apply may result in difficulty removing the screws and potential damage to the product. If screws are removed and reinstalled, always reapply anticorrosive lubricant.



**USEFUL TIPS**

Do not to over-tighten bolts, as this may damage the product. Always check for proper alignment before fully tightening bolts and be sure to securely fasten before moving onto the next step.

